

SPARE PARTS LIST for **Magbroach MLP148** magnetic hole cutting machine

no	Parts list
1	MAGNET BASE
2	MOTOR MOUNT BLOCK
3	BLOCK FIXING BOLTS M6 x 12 (4)
4	PINION DRIVE
5	M4 RAIL FIXING BOLT
6	M5 RAIL ADJUSTMENT SCREW AND LOCKNUT
7	RAILS (2)
8	ARBOR COMPLETE WITH LOCKING SCREWS AND SPRING
9	ARBOR SUPPORT BRACKET & BEARING
10	SLIDE AND RACK
11	GEARBOX COMPLETE

no	
12	BEARING REMOVAL SCREWS
13	GEARBOX CONNECTING PLATE
14	FUSE HOLDER
15	HANDLE BRACKET
16	HANDLE COMPLETE WITH FIXING BOLT
17	MOTOR UNIT COMPLETE
18	MOTOR NO VOLT SWITCH
19	SWITCH PLATE BOLTS
20	MAGNET/POWER SWITCH
21	SWITCH PLATE
22	M16 DOME GLAND

no	
24	RIGHT HAND COVER PLATE
25	LEFT HAND COVER PLATE
26	BOTTOM COVER PLATE
27	PCB BOARD
28	INTERNAL SPLINED SHAFT
29	BEVEL GEAR 16t / 29A DRIVE SHAFT
30	BEARING x2
31	25MM CIRCLIP
32	SPIRAL BEVEL GEAR 24t
33	SPRING/PLUNGER ASSEMBLY
34	RATCHET HANDLE
35	MAINS CABLE
36	GUARD & FIXING SCREWS

